

Assembling Illustration

For using an engine temperature controller:

Please first remove the ratchet spring and then install the needle control arm.

當搭配引擎溫度控制器時，組裝引擎油針伺服臂，請先將彈簧片移除。

Socket screw

圓頭內六角螺絲
M 2.5x6mm

**Engine needle
control ram**

引擎油針伺服臂

