

pulsar 3

User's manual (Firmware v3.16)



Device description

Pulsar 3 is a fast, professional battery charger with an integrated balancer. A newly designed synchronic digital converter operates with precision and efficiency unmatched by other devices of similar type due to the DSP (Digital Signal Processor) control. Power, work precision and ease of use were the key focus during the device's construction. The newest technology, rarely used in model chargers, guarantees an optimal operation of battery packages. Impulse work in the reflex mode prevents the memory effect and the lazy battery effect in NiXX batteries as well as lessens the threat of unbalancing in LiXX batteries. The real impulse mode "Fastmod" for Lixx and Pb batteries can shorten the charge time even by 30-40%. The integrated high-powered balancer equalizes the packages in a very short time, without unnecessary prolonging the process, thus keeping the singular cells' voltage perfectly equalized. The multiple algorithms operating simultaneously, which detect the level of the cells' voltage, as well as the capacity limiter and an integrated temperature indicator, protect the packages from overloading and damaging. The processes' parameters can be seen on the backlit graphic displayer. The self-explanatory single Rotary knob, as well as twenty integrated memory banks enable frequently used processes to be chosen faster, make for easier operation. An SD memory card enables recording the data from all of the processes, which can then be analyzed via the Pulsar Graph program on a PC or notebook, and helps detect damage earlier. By analyzing diagrams containing the gathered data, it enables tracing the charging packages' ageing. Updated data from the process undertaken are sent to a PC through USB or radio data transmission system (BT), which may in the future send data to cell phones. The charger protects batteries from deep discharge as well as overloading by controlling the charging batteries' (12, 24 and 48V) parameters, thus protecting them from damage. A separate AC adapter with a power limiter enables to adapt the work parameters to a particular charger. **Pulsar 3** is protected from reverse connection both at input and output. **Pulsar 3**, as one of the few modeling chargers, is equipped with a system that prevents electric arcing when high voltage packs are plugged in. The device's firmware update also is possible via the Internet.

Table of content

Chapter	Page
1. Device description	1
2. Technical specification	3
3. Precautions	3
4. Scope of use	3
5. EU – certificate of conformity	4
6. Features	4
7. Definitions, abbreviations and symbols	4
• Battery types	4
• Modes	4
• Parameters and abbreviations	4
8. Starting and operating	5
• Connecting the balancer	6
• Cautions	6
9. Batteries (attributes)	7
10. Operating principle – general description	7
• Main menu	7
• Program window	7
11. „SD, BT, RTC“ settings	8
• Memory window	8
• Personalization through an SD memory card	8
• Additional information concerning SD memory cards	8
12. Basic setup settings	9
13. Process set-up – charging NiXX cells	9
14. Process set-up – charging LiXX cells	10
15. Process set-up – charging Pb cells	11
16. Process set-up – discharge (all cell types)	11
17. Complex processes set-up e.g. charging/discharging	12
18. Process set-up – Store (only LiXX cells)	13
19. Process set-up – Format (only NiXX cells)	14
20. Balancer – operating	14
21. Process set-up – balancing only	15
22. Program windows of completed processes	15
23. Process initialization	17
24. Process end, reports and alarms	17
• Alarms – interrupting the process	17
25. Updating the software	18
26. PC software (PulsarGraph v 3.09)	19
27. Appendix 1 – Balancer adapter	23
28. Index	25

Technical specification

Battery types supported	NiCd, NiMH, Pb, Li-Ion, LiFe, LiPo, LiS* (prepared balancer)
Input/output device voltage	12V (10,5-16V); 24V (21-32V); 48V (42-60V) Car battery min. 30Ah – recommended from 70Ah or stabilized 48V power supply from 1500W
Automatic shutdown in case of reaching min voltage set in the following ranges:	10,5-12V 21-24V 42-48V
Charging voltage	0,5-64V 1-34 NiCd and NiMH; 1-24 Pb; 1-14 Li-Ion; 1-14 LiPo; 1-16 LiFe; 1-20 LiS*
Charging current	0,1-25A (max. 1500W)
Max charging power	400 W/12V; 800 W/24V; 1500 W/48V
Current set-up resolution (automatic ranges)	0,1-10,0A set in 0,1A intervals 10-25A set in 0,5A intervals
Discharging current	0,1-25A (400/800/1500W) with energy return 0,1-25 A (100W) with heat dissipation (operating on power supply)
Power limiter	50-1800W (input power, on power supply)
Temperature measurement	0-99°C (0,1°C resolution)
Voltage measurement	0,1-65V
Current measurement	0,1-25A
Time limit	14h per process (2x14h for complex processes)
Max balancing power	60W
Max equalized current per cell	0,25A; 0,5A; 1,0A (continuous current)
Min equalized current per cell	25mA; 50mA; 100mA (continuous current)
Number of cells (balancer)	2-16
Balancing precision	up to 3mV (0,003V)
Backlit graphic display	240 x 64 pixels
Temperature ranges	Use: from -5 to +35°C / keeping: from -10 to +50°C
Mechanical dimensions: width x depth x height	155 x 160 x 75mm
Weight	ca. 1200g

*Balancer made for lithium sulphuric cells

Precautions

- Read manual before use
- Do not perform any changes or modifications to the device
- Always pay attention to the right plug-in polarity
- Protect from humidity and dust
- Operate with a car battery **only** when the car engine is turned off
- Protect from short circuits and reverse polarity during plug-in
- During charging built-in batteries (e.g. in a transmitter) pay attention to the permitted current (e.g. transmitters permit 0,8-1,5A)
- Do not put any objects into the device through the charger's vents
- Vents must not be obscured in any way during use
- Contact customer service immediately after noticing any irregularities in the device's functioning
- Use the charger only under constant supervision
- The charger and batteries should always be placed on a non-flammable surface while used
- Do not turn on in close proximity with people, who have artificial health-maintaining devices vulnerable to the magnetic field (e.g. artificial cardiac pacemaker)
- When supplying the charger from a car battery, it is possible that the battery will be damaged due to excessive current draw

Scope of use

Pulsar 3 is a charger with an integrated balancer, designed to charge, test and discharge batteries used in all lines of modeling. It may be used to charge lead batteries (car batteries), but the charger is optimised to be used with lead-gel batteries. Using the charger for other purposes may endanger possessions and health, therefore it is advised to use the device according to its intended purpose.

EU – Certificate of conformity

Pulsar 3 is designed according to the general safety standards – especially home appliance's standards, such as EN 55014-1:2000 + A1:2001 + A2:2002 as well as EN 55014-2:1997 + A1:2001 (Cat.II)

ELPROG
ul. Przemysłowa 1/611
PL 35-105 Rzeszów



Features

1. **Pulsar 3** charger
2. User's manual
3. SD memory card (containing PC software, user's manual – PDF file)
4. USB cable
5. Optional BT antenna (only if the BT module is installed)

Definitions, abbreviations and symbols (in alphabetic order)

Battery types:

NiXX = NiCd (nickel-cadmium), NiMH (nickel-metal hybrid)
LiXX = LiPo (lithium-ion polymer), Li-Ion (lithium-ion), LiFe (LiPh), (lithium-phosphate), LiS (lithium-sulphur)
Pb = lead battery (also lead-jelly)

Modes:

Charge = charging
Ch.Dis = charging and then discharging (a double process)
Disch. = discharging
Dis.Ch. = discharging and then charging (a double process)
Format = special formatting and NiXX package regeneration program
Store = special program used to prepare LiXX packages for longer storing

Parameters and abbreviations:

↑ = voltage change tendency marker; displayed in the menu window above „V” (Volt) during charging and discharging, in the balancer window it marks the cell with the highest voltage.
↓ = voltage change tendency marker; displayed in the menu window above „V” (Volt) during charging and discharging, in the balancer window it marks the cell with the lowest voltage.
Δ (with NiXX) = *Delta-Peak* value; recognizing the charging state of NiXX batteries
Δ (with LiXX) = cell's voltage difference in LiXX packages
-, - Ah = limiter capacity settings
! = the exclamation mark informs of the altered parameter value as compared to the default settings (e.g. an altered final charging voltage value)
Ah/c = equalized capacity per cell (in the balancer window)
Auto = automatic discharge current reduction; the current, after reaching a discharge voltage of the package/cells, will be greatly reduced in order to reach a deeper discharge without exceeding the set voltage limit
B = current balancer power
Beep = acoustic signal
BT = optional wireless communication
C = {Capacity} charged or discharged capacity
Config_(0-9) = **Config_(0-9)** = Writing (and reading) of the current configuration on SD card (incl. memory)
Contr. = display's contrast settings
Cs = {Capacity supply} displays the amount of energy drawn from the power supply from the moment the charger was plugged in
E = {End} displayed alternately with „V” when at the end of the process the current has been reduced
Fast = Fastmod – a fast charging mode for LiXX cells
Format = special program for formatting NiXX packages
I = {Inflex} displayed after recognizing the *Inflex* point at the end of the NiXX packages' charging („I” is displayed alternately with „V”)
Ib = max. channel balancing current (0 = only the voltage measure for cells with the balancing disabled)
Inflex = a means of early NiXX packages' charging recognition
Invers = switches between negative and positive data display on the displayer
Last proc. = data from the last process
Light = display brightness

M = {Memory} memory place number

P = {Pulse} displayed alternately with „V” (Volt) during charging in *Fast* mode; it indicates switching to discontinuous operating mode at the end of the charging

Pause = pause between processes indicated in seconds (e.g. during charging/discharging)

Power = input power; this setting enables to limit the input power (e.g. in weaker AC adapters or smaller supply batteries)

Pulse = an impulse operating mode (should be enabled if the power supply is supplied by a power generator which has a negative reaction with power consumption oscillation)

R = {Revers} displayed alternately with „V” (Volt) during charging discharging with an energy return; it indicates the current reduction after exceeding the V_{rev} voltage of the supplying battery

Reflex = impulse work with a discharging impulse. Suggested for all battery types!

Regen. = regeneration function initialized along with the formatting mode of NiXX packages

Rep.*99 = {Repeat} the number of double processes' repetition (charging/discharging or format)

Revers = discharging with an energy return to the supplying battery (enables to increase the discharge power)

Ri = internal resistance of the package or cell

RTC = {Real-Time Clock} real-time clock (required for recording data on the memory card)

SD = {Secure Digital Memory Card} – memory card

Tc = {Temp. cell} package temperature measured with the temperature indicator which comes with the charger

Ti = {Temp. internal} internal temperature of the charger

Store = a program created to charge or discharge packages to the storing voltage level (LiXX)

T off = max. temperature at which the process is stopped

T on = the temperature below which the process will start (in other words – the charger waits for the package to cool down)

V/c = {V/cell} voltage of a single cell or package – evaluated for one cell

Vc = {Vcharge} final charge voltage (can be modified individually)

Vd = {Vdischarge} final discharge voltage (can be modified individually)

Ve = {Vend} storage voltage – *Store* (can be modified individually)

Voff = min. supplying battery voltage, at which the process is stopped (prevents deep discharge)

Vs = {Vsupply} supply voltage (battery or supply source)

Vrev = {Vrevers} max. supplying battery voltage, which – when exceeded – will reduce the charging current with a return (a protection for the supplying battery)

Starting and operating

Front view




1. Rotary knob

Right side





1. Rotary knob
2. Charge output minus
3. Charge output plus
4. Temperature indicator socket
5. Balancer socket

Left side

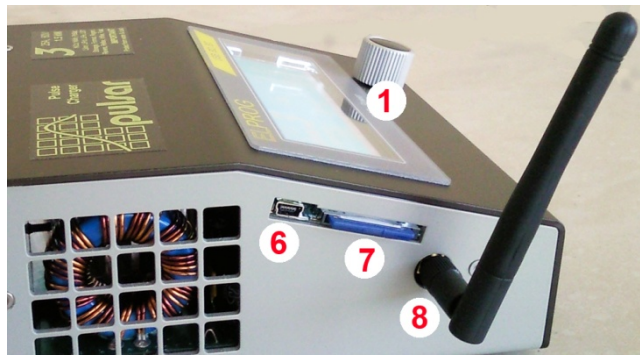

1. Rotary knob
6. USB socket
7. SD memory card
8. BT antenna (optional)

Plugging the balancer

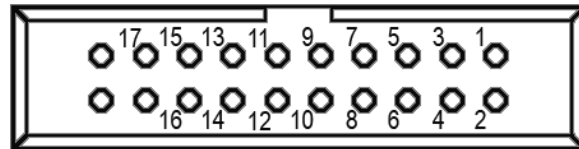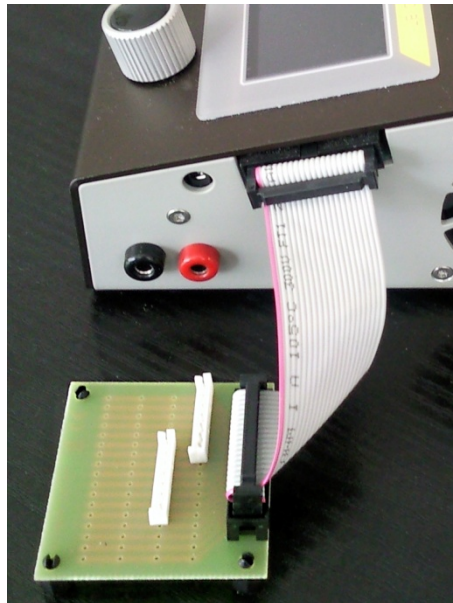

Pulsar 3 balancer socket – the device's right side view

Plugging separate pins: 1 = – cell 1; 2 = + cell 1; 3 = + cell 2; 4 = + cell 3; 5 = + cell 4; 6 = + cell 5; 7 = + cell 6; 8 = + cell 7; 9 = + cell 8; 10 = + cell 9; 11 = + cell 10; 12 = + cell 11; 13 = + cell 12; 14 = + cell 13; 15 = + cell 14; 16 = + cell 15; 17 = + cell 16. Additionally it is possible to plug in a temperature indicator to pins 19 and 20 (NTC 10kΩ).

WARNING! Do not plug in packages, which do not have pins specially prepared to be used with *Pulsar 3*, directly to the device! Pin 20 has a positive voltage for the measuring temperature indicator!

We recommend using our adapter to connect the balancer plugs in the packages. It makes proper plugging with different types of pins easier. The connection's details can be found in appendix 1 on page 22 of this manual.

Attention!

- All battery packs equipped in balancing joints should be plugged into the balancer socket (5) first, and then to the charger through cables (2,3). In this way the correct number of cells in the pack will always be recognized.
- Before plugging the adapter plug to the charger, first plug in the pack balancer plugs to the adapter (see appendix 1 page 22). In this way the charger will be safe from potential damage resulting from mixing the battery balancing plugs or from them being improperly connected. In this case a short circuit would damage only pins or paths on the adapter board, which will work as a fuse.
- As a safety measure temperature control through a plugged in temperature indicator is always advised.
- After plugging the pack into the charger it is necessary to ALWAYS control and confirm the indicated number of cells. Confirming an invalid number of cells in the package may result in damaging the package and cause other material damage.
- Always pay attention to the proper charging and discharging current choice. The charge must be selected accordingly to the type, kind and size of the cells.
- Charging cables with appropriate connections and pins as well as wire section fitted to the charge should be used. Using high-current cables with silicon isolation with a 4 mm² diameter is recommended. Charging cables should be short.
- **Pulsar 3** is equipped in a system, which prevents arcing when the cables are being plugged in for charging. However, it is recommended that cables should be plugged in and out rapidly and firmly.
- In order to avoid arcing, plugging and unplugging by a battery-lead connection to the power supply or AC adapter should be done rapidly and firmly.
- After unplugging the charger from the power supply, it shouldn't be reconnected earlier than 5 seconds.
- The process can be interrupted through holding down the rotary knob (**interrupting the process through unplugging the device is forbidden**).



Batteries (parameters)

Type	LiPo	Lilon	LiFe	NiCd	NiMH	Pb
Name	lithium-ion polymer	lithium- ion	lithium- iron	nickel-cadmium	nickel-metal hybrid	lead
Rated voltage	3,70V	3,60V	3,30V	1,2V	1,2V	2,0V
Charging voltage*	4,20V	4,10V	3,65V	–	–	2,45V
Discharging voltage*	3,30V	3,00V	2,80V	0.9V	1,0V	1,8V
Storing voltage*	3,80V	3,75V	3,35V	–	–	–
Balancing voltage - start	3,95V	3,85V	3,48V	–	–	–
Max. charging voltage	4,35V	4,30V	3,75V	1,85V	1,85V	2,55V
Min. charging voltage	3,00V	2,70V	2,20V	–	–	–

*- the voltage can be lowered by 200mV or increased by 100mV every 10mV max. Any change in charging/discharging voltage will result in a change in max. charging/ min. discharging voltage of the same value.

Operating principle – general description

Main menu (shown in positive and negative)

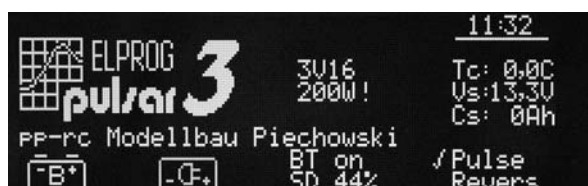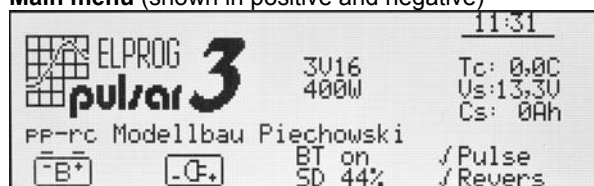

Window description: From top: clock; software version (here v3.15); power (400W), on the right switched to AC adapter, the adapter has a 240W Power, thus the power output is limited to 200W (the limitation is signaled by an exclamation mark); personalization (pp-rc Modellbau Piechowski) shows the max. amount of characters; BT on (radio communication activated); SD 44% (the memory card is 44% full); TC current temperature (0,0°C – temperature indicator not plugged in); Vs adapter voltage (13,3V); Cs (0 Ah) taken capacity (e.g. car battery); Pulse – impulse mode activated; Revers – energy return during discharge; on the left – activated; on the right - deactivated.

Pulsar 3 is operated using a Rotary knob. The dial can be turned left and right, pressed for a short (up to 1 second) or held for a long (more than 1 second) time. Both pressing and holding is confirmed by an appropriate acoustic signal (if the sound has not been muted in the setup). Options are chosen from the list by turning the dial to the one that interests us (blinking line), and then choosing it by pressing the dial. The value of the chosen option is set in the same way.

After plugging in to the power supply, **Pulsar 3** will display the main menu. The operation mode can be changed (setup, one with the battery symbol, the other with a power supply symbol), after which we are redirected to the last used memory window.

The memory window is a starting point to all process' settings and parameters. Memory windows are numbered from 1 to 20 (on the left side there is a frame with an „M” as well as numbers from 1 to 20). Settings made in there remain memorized even after the charger has been turned off.

Through holding the dial for a long time we enter the program window. There we have the following options:

Program window



Window description

- **-exit-** – return to memory window
- **Mode & Accu** – programming the charger's mode and the type of charger and battery type for the memory cell
- **Parameters** – process parameter settings for the memory cell
- **Memorys** – data collected from the last twenty processes
- **SD, BT, RTC** – SD memory card options, BT parameter and clock settings
- **Setup** – defining basic settings important for all processes

After about 10 seconds of inaction (from the last rotations of the dial) the windows will close automatically and the charger returns to the memory window (you can also return to it by choosing “-exit-”). Further detailed setting descriptions may be found in descriptions of specific processes.

Memory			12:06	2011-10-08
+16:	4 LiFe -	1,880 Ah	21:35	2011-09-30
17:	4 LiFe +	2,056 Ah	21:16	2011-09-30
18:	4 LiFe -	1,858 Ah	21:13	2011-09-30
19:	4 LiFe +	2,013 Ah	20:49	2011-09-30
20:	4 LiFe -	1,875 Ah	20:09	2011-09-30

Memorys window description. Horizontally:
 “16” – number of the process (1 - last); “4LiFe” – number and type of cells; “-1,880Ah” discharge capacity (‘+’ stands for charging); “21:35 2011-09-30” – time and date of process ending.
 Top-right “12:06 2011-10-08” current time and date.

„SD, BT, RTC“ settings

SD & BT	
-exit-	BT on
Import	P3 PP-RC
Export	20:20
Backup	2011-05-14
SD 2%	

Window description

- **-exit-** – return to memory window
- **Import** – rewriting the settings from the SD card to the charger (enables using personal settings for other chargers): SD->P3
- **Export** – memorizing charger settings on the memory card: This way you can use your own settings (also on another charger) and save ten different settings under „config“ numbers from 0 – 9 (incl. process memory). This way you can save up to 200 process settings
- **Backup** – archiving saved processes (files). All previously saved files (up to 999) from the “Data” folder will be moved to the “Backup” folder and new files will be generated from number 001 in the “Data” folder, previous data in the “Backup” folder will be removed!
- **BT (on/off)** – turning on/off wireless BT transmission. If the BT module is not plugged In a „no BT” sign is displayed – the function is not active.
- **P3 xx...x** – naming a specific BT device. Initially it is named „P3-..”, after which 6 digits can be assigned. If the name is to be shorter than 6 digits, insert dashes in the free spaces (up to 6 characters). These symbols will not be considered a part of the name. Connecting other devices to the charger should be confirmed by typing **code 1234**
- **20:20** – clock settings
- **2011-05-14** – date settings

Before plugging the power supply to **Pulsar 3**, it is important to make sure if the memory card and the BT antenna (optional) are in the charger. After pressing the dial on the “SD, BT, RTC” line in the program window (we go to the program window by holding the dial from any memory window) we are redirected to the „SD, BT, RTC” settings.

Setting the BT name is important as it will let us recognize our device easier among other devices in close proximity. Setting the date and time are vital for recording data on the memory card. File identification is easier thanks to this.

WARNING: as long as **Pulsar 3** is connected through an USB cable wireless transmission is disabled.

The window will be exited by pressing **-exit-** or automatically after 10 seconds from the last dial movement.

Personalizing through an SD memory card

In the folder located on the card: **PULSAR3/Setup** there is a file named *title.txt*. The text written there is displayed in the main menu under the **Pulsar 3** logo right after the chargers startup. A simple text editing program (e.g. Notepad) may be used to edit his text. The text may not surpass 26 characters from the English alphabet ({ ` } inserts a narrow space). If the file isn't to be found on the memory card, the sign „**Pulse charger**” will be displayed.

Additional information concerning the SD memory card

Cards formatted in a PC (FAT16 to 2GB or FAT32 with a 4GB capacity) should be specifically used in **Pulsar 3**. After turning on the charger with an empty SD card (without a folder structure) – necessary folders will be created automatically: (PULSAR3 as well as BACKUP, DATA and SETUP). Such a card is ready to be used immediately. The card should be inserted and removed only when the charger is not plugged into a power supply!

Basic setup settings

Pulsar 3 has two equivalent device memory settings – *Setup*. One of them is marked with a battery symbol and the other with a power supply symbol. As both of them are identical they can be used freely. When for example we operate the charger only with a power supply (or only with a battery) they can be both used with different setup memory settings (depending on the need) with the same type of supply.

Through pressing the dial for on the “*Setup*” line we enter the settings from the program window (we enter the program window by holding the dial from any memory window)


Setup windows (shown in positive and negative)



Window description

- **-exit-** – return to memory window.
- **Beep** – enable/disable acoustic signaling.
- **Pulse** – enable/disable impulse work.
- **Revers** – enable/disable discharging with an energy return do the supplying battery (*Revers*, must be turned on when operating with a power supply, or it may result in damaging the supply) if it is not marked, operating with an energy return is blocked for all memories (in a memory where the energy return was enabled, a ‘-’ symbol is displayed before *Revers*)
- **V rev** – max. battery voltage settings, after exceeding which the charge reduction will commence (*Revers* – enabled), this protects the supplying battery from overloading during the energy return, especially when a Lilo, LiPo or LiFe batteries are used (e.g. when supplying with 3 Lilo cells the voltage should be set to 12,4 V, which is about 3*4,1V – see the *Charging voltage* table on page 7, 15V for PB).
- **Power** – setting the power input: 50-1800W, in 10W intervals. This can protect weaker power sources and batteries from overcharging.
- **T on** – setting the temperature from which the process is enabled: 25-55°C (‘-C’ disabling the function).
- **T off** – setting the temperature from which the process is stopped: 38-60°C (‘-C’ disabling the function, the temperature set in *T off* must be at least 5°C higher than *T on*).
- **V off** – min. supply battery voltage below which the process will be stopped (his protects the battery from deep discharge): 10,5-12V for 12V batteries and 21-24V and 42-48V for 24V and 48V batteries.
- **Invers** – switch the display from negative to positive.
- **Contr.** – display contrast: 0-15.
- **Light** – display backlight intensity: 0-15.
- **Pause** – pause time between processes (e.g. charging/discharging in cycles): 15-900s in 15s intervals.

Process set-up – charging NiXX cells (NiCd, NiMh)

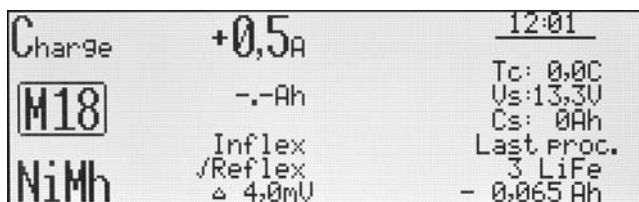

Window description: From top left: charging is set; in memory window M 18; type of battery NiMh; charging current 0,5A; “=,Ah” – the limiter is disabled; Inflex is disabled; reflex is enabled; Δ 4,0mV (standard value)

All process settings are conducted in a very similar way. First, choose the appropriate memory window that is to be programmed (from **M 1** to **M 20**). Secondly, enter the program window by holding the dial, where the “**Mode & Accu**” option is selected. Here the battery type and the type of the process that is to be programmed is set. For lithium NiXX batteries the following programs have been prepared: **Disch.** (discharge), **Charge** (charge), **Dis.Ch.** (discharge/charge), **Ch.Dis.** (charge/discharge), **Format** (format).

The process parameters can be changed if necessary. Through holding the dial we enter the program window where we chose the “**Parameters**” option, which enables us to set all the parameters important for the process according to our requirements.

And so, for NiXX:

- **-exit-** – return to memory window.
- **Inflex** – enables ending the process earlier. Inflex should be used only with charges higher than 1C and accupacks with more than 4 cells. Enabling the Inflex mode is signaled (while the process is in progress) by an „I” symbol under the battery animation.
- **Reflex** – enables charging and supercharging NiCd and NiMh batteries without the threat of the „Memory effect” occurring. In this charging mode short discharging impulses are emitted. Packages charged with reflex often have a lower resistance.
- **Δ** – „Delta-Peak” setting, if the set value diverges from the suggested one, an exclamation mark is displayed (! Δ). With NiCd the value May be set from 4 to 25mV and 1-15mV with NiMH.

Exiting the settings menu can be made by choosing -exit- or automatically after 10 seconds from the last dial movement.

Warning! Checking *Inflex* and *Delta-Peak* starts after 2 minutes with NiCd and after 4 minutes with NiMH. Caution is advised when full packages are to be plugged (supercharging them with higher charges), to avoid overloading the packages.

Setting the charging current

After a press of the dial the required current can be set in the memory window, and after confirming (press of the dial) the limiters' value. The current's value can be between 0,1A to 0,25A set in the following intervals: 0,1A intervals up to 10,0A, 0,5A above 10A. The limiter's capacity is set from „-Ah” (the capacity is not controlled) to 99Ah. Using the limiter is advised, especially with new packages which have not yet been formatted. The limiters value should be set a bit higher than the cells capacity (by about 5-10%), which will prevent unnecessary package overload when the proper evaluation of *Inflex* and *Delta-Peak* is impossible, as a result of unequally charged cells.

After all settings meet our requirements we can plug in the battery packages to the charger. **Before beginning the process it is necessary to check if the number of cells in the package matches that indicated by the charger.** After adjusting the number of cells, if necessary, we can start the process by pressing the Rotary knob.

It is important to stress that the procedure described above shows how to set all of the parameters and in practice, to start the process, it May be limited to a few steps. Proper memory setting and creating ready programs to all battery packages is recommended as it will make operating the charger easier and faster.

Process set-up – charging LiXX cells

All process settings are conducted in a very similar way. First, choose the appropriate memory window that is to be programmed (from **M 1** to **M 20**). Secondly, enter the program window by holding the dial, where the **“Mode & Accu”** option is selected. Here the battery type and the type of the process that is to be programmed is set. For lithium NiXX batteries the following programs have been prepared: **Disch.** (discharge), **Charge** (charge), **Dis.Ch.** (discharge/charge), **Ch.Dis.** (charge/discharge), **Store** (charging or discharging packages to a storing voltage level).

The process parameters can be changed if necessary. Through holding the dial we enter the program window where we chose the **“Parameters”** option, which enables us to set all the parameters important for the process according to our requirements.

And so, for Lixx:

- **-exit-** – return to memory window.
- **Ib:x,xx** – setting the max. balancing current: **Ib: 0,00** – no balancing (the voltage of singular cells will be displayed in the balancer windows); **Ib: 0,25** – balancing with a max. current of 0,25A/cell, (for small capacity packages of 500mAh); **Ib: 0,50** – balancing with a current of 0,50A/cell (for packages of 500-3000mAh); **Ib: 1,00** – balancing with a current of 1A/cell (use with all LiFe cells as well as other LiXX cells up to 2000mAh). The general rule is that the shorter the charging time (charging with higher currents) and the higher the package's capacity the higher the balancing current should be.
- **Fast – Fastmod** – a type of fast, impulse charging of Lixx and Pb batteries. *Fastmod*, thanks to a special charging algorithm, greatly accelerates the charging process. After using *Fastmod*, batteries have a lower inner resistance, and due to this a better voltage flow during discharging. Depending on the charging current, the battery's type, its usage and inner resistance, the charging time may be reduced by even 30% with only a slightly lower capacity. *Fastmod* can be used constantly without any negative side effects for the battery. To make this mode easier to recognize during its use, an animation on the charging battery symbol is three times faster than during normal charging and the letter “F” is displayed under the animation.,
- **Reflex** – *Reflex* mode is also very good for charging LiXX cells. Batteries charged in this way are less likely to unbalance. Short discharge impulses slow the charging process in a slight way.

- **Vc** – setting the final charging voltage. If the value differs from the recommended one, an exclamation mark will be displayed (! **Vc**). For LiPo this value would be 4,00-4,30V/cell; for Lilo: 3,90-4,20V/cell; for LiFe: 3,45-3,75V/cell. It is important to mention, that contrary to popular believe 4,20V/cell is not the final safe voltage limit for LiPo cells but only a compromise between current delivery ability and life expectancy. Lower final charging voltage (below the mentioned 4,20V) enhances the battery's life expectancy but the charge capacity is lower. We advise using standard settings.

Setting the charging current

After a press of the dial the required current can be set in the memory window, and after confirming (press of the dial) the limiters' value. The current's value can be between 0,1A to 0,25A set in the following intervals: 0,1A intervals up to 10,0A, 0,5A above 10A. The limiter's capacity is set from “-,-Ah” (the capacity is not controlled) to 99Ah. Setting the limiter with LiXX batteries is crucial only in special cases.

The loading process is finished when the final charging voltage is reached (1/10 of the set charging current or reaching 100mA – the lowest charging current possible), or when the *Fastmod* charge's end detection notifies so (if Fast has been enabled).

After all settings meet our requirements we can plug in the battery packages to the charger.

Warning: all packages with a balancing connection must always be plugged in the following order – first the balancer, then the charging cable. Thanks to this the charger will always recognize the right amount of cells in the package! It is important to check if the number of cells in the package has been properly recognized before starting the process. After adjusting the number of cells, if necessary, we can start the process by pressing the Rotary knob.

Process set-up – charging Pb cells

Settings for lead batteries are very similar as to the LiXX batteries, and because of that only the differences will be described below.

Setting the balancer is not an option as far as lead batteries are concerned. Fast and Reflex modes have similar advantages as in the case of LiXX batteries. The final charging voltage „**Vc**“ can be changed between 2,25V/cell and 2,55V/cell. When the value reaches the one suggested an exclamation mark will be displayed (! **Vc**).

The charging process will end when the final charging voltage will be reached (1/5 of the set charging current or 100mA – the lowest charging current possible) or when the *Fastmod* detects the end of the process (if *Fastmod* is enabled).

Process set-up – discharging (all cell types)



Window description. From top left: set to discharge; in memory window M 1; LiFe battery type; discharge current 25A; “-,- Ah” – the limiter is disabled; balance current 1A (Ib:1,00); Revers (energy return) is enabled in the memory but, as the dash indicate, it is generally disabled in the setup window; final discharge voltage Vd (2,80V);

From top right – information window: TC current temperature; supply voltage Vs: (48,4V); amount of consumed energy Cs: (0Ah); last process information – 2 LiPo cells; charged by 0,063Ah

All process settings are conducted in a very similar way. First, choose the appropriate memory window that is to be programmed (from **M 1** to **M 20**). Secondly, enter the program window by holding the dial, where the “**Mode & Accu**” option is selected. Here the battery type and then **Disch.** (discharge).

The process parameters can be changed if necessary. Through holding the dial we enter the program window where we chose the “**Parameters**” option, which enables us to set all the parameters important for the process for a particular battery type.

And so:

- **-exit-** – return to memory window.
- **Ib:x,xx** (only for LiXX) – setting the max. balancing current: **Ib: 0,00** – no balancing (the voltage of singular cells will be displayed in the balancer windows); **Ib: 0,25** – balancing with a max. current of 0,25A/cell, (for small capacity packages of 500mAh); **Ib: 0,50** – balancing with a current of 0,50A/cell (for packages of 500-3000mAh); **Ib: 1,00** – balancing with a current of 1A/cell (use with all LiFe cells as well as other LiXX cells up to 2000mAh). While discharging, the balancer has the same voltage limits as when charging.
- **Auto** – when his parameter is enabled, the current will be reduced after reaching the final discharge voltage by 1/5 of the currently set current. The process will be stopped when the reduced current reaches the value lower than 1/10 of the set current or then 100mA (the lowest possible current). Example: the discharge current is 15A. After reaching the current's final discharge voltage by 1/5 it will give us 12A. After another current reduction by 1/5 it will be 8A, 6,4A ...1,5A. When the "Auto" parameter is disabled, the discharge will be stopped immediately when the final discharge voltage will be reached (without the current reduction – which is 15A in the example given).
- **Revers** – a return of energy to the supplying battery (car battery) helps reaching a higher discharge power. When setup (as the "higher power") blocks this function, but it will be enabled the memory window a dash will be displayed before the "Revers" sign (**-Revers**). When this function will be enabled in the setup, the dash will disappear from all memory Windows, in which Revers is present, and the function will be enabled (the dash will be replaced by a „v“). To easily recognize if the energy return is in progress during the process, a discharge animation will be displayed three times faster than during discharge without the energy return. There will also be an "R" letter underneath the animation, and if that "R" is displayed alternately with "V" (Volt) – the current reduction Has occurred after exceeding the supply batteries' voltage (Vrev – setup). **WARNING:** enabling the energy return when the charger is supplied by an AC adapter may lead to damage to the adapter!
- **Vd** – final discharge voltage settings. If the set value is other than the recommended settings, an exclamation mark will be displayed (! **Vd**). For cell types: **LiPo** 3,10-3,40V/cell; **Li-Ion** 2,80-3,10V/cell; **LiFe** 2,60-2,90V/cell; **NiMH** 0,80-1,10V/cell; **NiCd** 0,60-0,95V/cell; **Pb** 1,60-1,90V/ell. We advise using standard settings.


Setting discharge current

After a press of the dial the required current can be set in the memory window, and after confirming (press of the dial) the limiters' value. The current's value can be between 0,1A to 0,25A set in the following intervals: 0,1A intervals up to 10,0A, 0,5A above 10A. The limiter's capacity is set from **"-,-Ah"** (the capacity is not controlled) to 99Ah. Setting the limiter with LiXX batteries is crucial only in a particular case.

After all settings meet our requirements we can plug in the battery packages to the charger. Before beginning the process it is necessary to check if the number of cells in the package matches that indicated by the charger. After adjusting the number of cells, if necessary, we can start the process by pressing the Rotary knob.

Warning: all packages with a balancing connection must always be plugged in the following order – first the balancer, then the charging cable. Thanks to this the charger will always recognize the right amount of cells in the package! It is important to check if the number of cells in the package has been properly recognized before starting the process. After adjusting the number of cells, if necessary, we can start the process by pressing the Rotary knob.

Double processes set-up e.g. charging/discharging

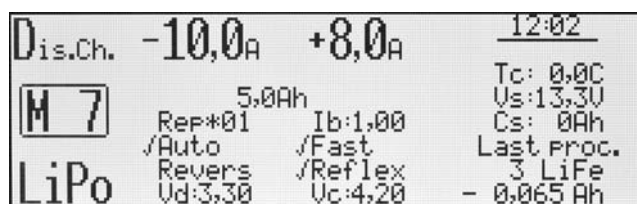

Window description. Charging/discharging is set; in memory window M 7; LiPo battery type; discharge current 10A; charge current 8A; 5Ah limiter. In the column under the discharged current – discharge parameters (REP*01 – one cycle); under the charge current – charge parameters

Setting double processes (also cycles) is conducted in an identical way as the charge and discharge processes separately. Additionally we can set the following parameters:

- **Rep*01** – number of cycles from 1 to 99

Please bear in mind that the **"Pause"** value set in the setup concerns only the pause time between the processes (e.g. charging – pause – discharging – pause - ...).

Setting the currents in double processes

For example for **Dis.Ch.** (discharging/charging) – after a press of the Rotary knob in the memory window, we set the desired discharge current and, after confirming it (press of the dial), we set the charge current and after confirming it we may set the limiter value. We proceed in a similar way with **Ch.Dis.** (charging/discharging).

Process set-up – Store (storing LiXX cells)



Window description. From top left – “Store” process window after plugging in the package; the battery is charged in about 94%, has an 8,3V voltage (4,1V/cell). 2s-LiPo package, the difference between singular cells is 0,01V.

From top right – information window: TC current temperature; charging voltage Vs: (48,4V); energy consumed Cs: (0Ah); last process information – 12 LiFe cells; charged by 0,779Ah

The “Store” function (storing) leads to cell voltage in the package, till it reaches the storing level (see **Batteries** table (parameters)), through discharging and charging. A package prepared by such a function may be stored for a longer time. **Pulsar 3** automatically recognizes if the package has to be charged or discharged and after plugging the package, it starts the process required to do this.

Warning: all packages with a balancing connection must always be plugged in the following order – first the balancer, then the charging cable. Thanks to this the charger will always recognize the right amount of cells in the package! It is important to check if the number of cells in the package has been properly recognized before starting the process. After adjusting the number of cells, if necessary, we can start the process by pressing the Rotary knob.

First, choose the appropriate memory window that is to be programmed (from **M 1** to **M 20**). Secondly, enter the program window by holding the dial, where the “**Mode & Accu**” option is selected. Here the battery type is chosen and then **Store**. (storing),

The process parameters can be changed if necessary. Through holding the dial we enter the program window where we chose the “**Parameters**” option, which enables us to set all the parameters important for the process for a particular battery type.

And so:

- **-exit-** – return to memory window
- **lb:x,xx** (only for LiXX) – setting the max. balancing current: **lb: 0,00** – no balancing (the voltage of singular cells will be displayed in the balancer windows); **lb: 0,25** – balancing with a max. current of 0,25A/cell, (for small capacity packages of 500mAh); **lb: 0,50** – balancing with a current of 0,50A/cell (for packages of 500-3000mAh); **lb: 1,00** – balancing with a current of 1A/cell (use with all LiFe cells as well as other LiXX cells up to 2000mAh). The balancer is active regardless of the cell's voltage.
- **Revers** – a return of energy to the supplying battery (car battery) helps reaching a higher discharge power. When setup (as the “higher power”) blocks this function, but it will be enabled the memory window a dash will be displayed before the “Revers” sign (**-Revers**). When this function will be enabled In the setup, the dash will disappear from all memory Windows, in which Revers is present, and the function will be enabled (the dash will be replaced by a „✓“). To easily recognize if the energy return is in progress during the process, a discharge animation will be displayed three times faster than during discharge without the energy return. **WARNING:** enabling the energy return when the charger is supplied by an AC adapter may lead to damage to the adapter!
- **Ve** – storage voltage setting. If the set value is other than the recommended settings, an exclamation Mark will be displayed (! **Ve**). It can be set for: **LiPo** 3,60-3,90V/cell; **Li-Ion** 3,55-3,85V/cell; **LiFe** 3,15-3,45V/cell.

The process will be stopped when the reduced current's value will reach below 1/10 of the set current or below 100mA (the lowest possible current).

Process set-up - Format (formatting NiXX cells)



Window description. From top left: formatting is set; in memory window M 17; NiMh battery type; 2,4A charge and discharge current; 2,6Ah limiter; 4 cycles (Rep*04); regeneration enabled; final discharge voltage Vd (1,00V); Δ 4,0mV (standard value)

Formatting NiXX battery packages is conducted through programming the number of charge/discharge cycles. The discharge is conducted in this program if the "Auto" parameter is enabled. Formatting NiXX cells is particularly important with new, not yet used packages, whose cells are not yet equalized. General formatting is conducted with low currents of an estimate value of 1/10 C. „C" represents the charge or discharge current which is dependent on the battery capacity (in ampere-hour). And so, a battery with 500mAh capacity a 1C current is equal to 0,5A.

First, choose the appropriate memory window that is to be programmed (from **M 1** to **M 20**). Secondly, enter the program window by holding the dial, where the "**Mode & Accu**" option is selected. Here the battery type is set to NiCd or NiMh and then **Format**. (formatting),

The process parameters can be changed if necessary. Through holding the dial we enter the program window where we chose the "**Parameters**" option, which enables us to set all the parameters important for the process for a particular battery type.

And so:

- **-exit-** – return to memory window.
- **Rep*01** – number of formatting cycles from 1 to 99. Please bear in mind that the "**Pause**" value set in the setup concerns only the pause time between the processes (e.g. charging – pause – discharging – pause - ...). During formatting a new package, at least 3-4 cycles are recommended.
- **Regen.** – a special means of regenerating cells in the used packages, which have lost some of its capacity and have a heightened internal resistance. During formatting with regeneration, at least 2-3 cycles are recommended.
- **Vd** – final discharge voltage settings. If the set value is other than the recommended settings, an exclamation mark will be displayed (! **Vd**). For cell types: **NiCd** 0,60-0,95V/cell; **Pb** 1,60-1,90V/cell.
- **Δ** – „Delta-Peak" setting, if the set value is other than the suggested one, an exclamation mark is displayed (! **Δ**). With NiCd the value may be set from 4 to 25mV and 1-15mV with NiMH.

Setting the formatting current

We can set the limiter value after a press of the Rotary knob we set the desired format current in the memory window (same current for charging and discharging) and then confirming (press). It is recommended to use the limiter, especially with new packages which have not yet been formatted. The limiter setting should be a bit higher than the cell's capacity (by about 5-10%). Unnecessary overloading as a result of unequally charge cells, which makes proper recognition of the *Inflex* point or *Delta Peak*, may be prevented in this way.

After all settings meet our requirements we can plug in the battery packages to the charger. Before beginning the process it is necessary to check if the number of cells in the package matches that indicated by the charger. After adjusting the number of cells, if necessary, we can start the process by pressing the Rotary knob.

Balancer – operating


A balancer (Equalizer) integrated with the charger Works with a high power (1A balancing current). The balancer equalizes the cells' voltage in packages to the lowest one (e.g. for a 16s package – 15 cells can be equalized simultaneously). Each balancing channel has an individually regulated equalizing current – it depends on the level of unbalancing. For each battery type a different initial balance current is fitted, which is corrected in the case of a strong unbalancing (balancing may begin earlier). The higher the cell's voltage is, the more intensive the balancing. It is important to mention, that balancing below a certain voltage limit is not only not recommended but even harmful. **That is why it is recommended to balance during charging.** The only exception is when the package is prepared for longer storage (*Store*).

Process set-up – Only balancing

We plug in the package to the charger through the balancer connection (do not plug current cables to the black and red sockets). The “**only Bal.**” information will then be displayed. Pressing the dial will start the cells’ balancing process according to the current settings in the given program (**lb:x,xx** balancing current, if **lb:0,0A** – the charger acts as a voltage monitor). Packages will be balanced in this operating mode in the whole voltage scope.

Program windows of finished processes

Process windows provide on-the-spot information concerning the processes’ progress. Three process windows have been described below to make the displayed information’s interpretation easier. In the case of batteries not plugged to the balancer the basic window (illus. below) or *Memorys* window, with history of the 5 last processes, is displayed. The windows can be switched between with a turn of the dial or pressing it for a short time.

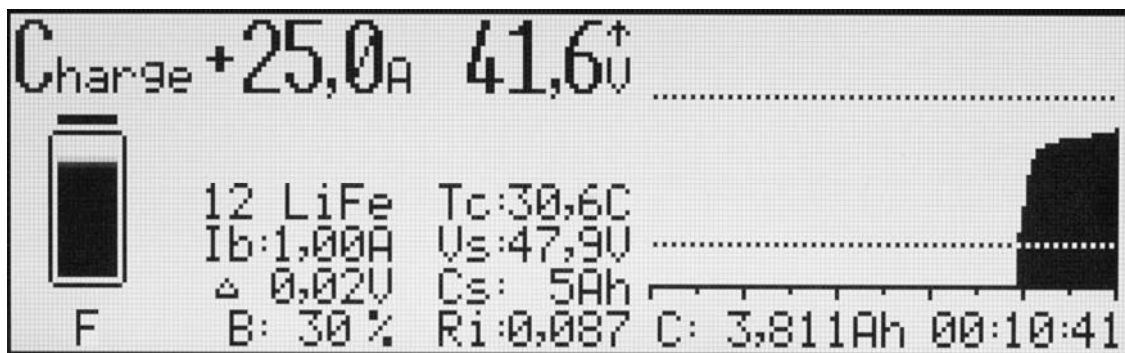


The window showed above (basic process window) contains the following information:

1. **Charge** – charging
2. **+25A** – current charge current
3. **41,6V** – current voltage of the whole package
4. **↑** – voltage change tendency marker
5. **Battery symbol** – a graphic animation of the charging process
6. **F** – indicates that the charger is operating in *Fast* mode
7. **12 LiFe** – battery type – 12 LiFe cell package
8. **Ib: 1,00 A** – balancing power (1A per cell), balancer plugged in
9. **Δ 0,02V** – difference in voltage between the strongest and the weakest cell in the package (0,02V), balancer plugged in
10. **V/c** – the average voltage in the package estimated for one cell, balancer unplugged
11. **B: 30%** – current balancer power (30% of the set 1A), balancer plugged in
12. **Tc: 30,6C** – current temperature (30,6°C)
13. **Vs: 47,9V** – input voltage, power source (47,9V)
14. **Cs: 5Ah** – power consumed by the charger from the power source (5Ah) on a particular day
15. **Ri: 0,087** – current internal resistance of the package (0,087Ω). The *Ri* value is estimated only during the impulse charging (**Pulse on** in *Setup*).
16. **Upper dotted line** – final charge voltage
17. **Voltage chart in the process** – increases during charging, decreases during discharging
18. **Lower dotted line** – final discharge voltage
19. **Time scale** – with intervals each 10 and 5 minutes
20. **C: 3,811Ah** – current charged capacity (3,811Ah)
21. **00:10:41** – process duration



Cells' voltage (**V/c**) window contains the following information:

1. **3,52V** – average voltage of all cells in the package (V/cell)
2. ↓ – voltage change tendency marker displayed above "V" (Volt)
3. **Row of numbers** – singular package cells' numbering starting from the first, plugged into the package's "minus" cable
4. ↑ **3,53V** – voltage of the strongest cell in the package (here cell nr. 9)
5. Δ **0,01V** – difference in voltage between the strongest and the weakest cell (10mV in this example).
6. ↓ **3,52V** – voltage of the weakest cell in the package (here cell nr. 2)
7. **V/c** – cell's voltage window – one of the two windows of the balancer
8. **B: 90%** – current balancer power (90% max. power of the balancer)
9. **Upper dotted line** – +0,05V voltage in proportion to average package value
10. **Middle dotted line** – average package voltage
11. **Lower dotted line** – -0,05V voltage in proportion to average package value
12. **Singular bottom lines** – balancer power level (singular channel). The higher the line, the higher the balancing power of that cell is.
13. **Singular voltages** (on the right) – the cells with the highest and the lowest voltage are marked with the appropriate arrow (here cells 9 and 2)

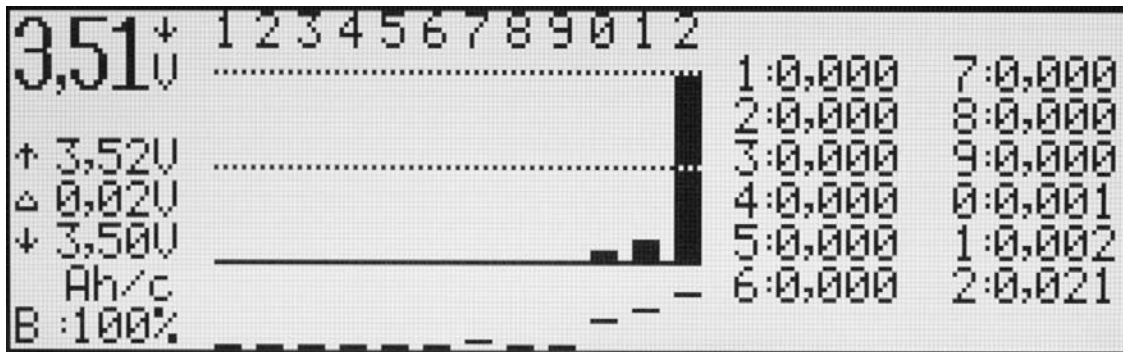

Equalized package capacity window (**Ah/c**) contains the following information:

1. **3,51V** – (above „V“) – average voltage of all cells in the package (V/cell)
2. ↓ – voltage change tendency marker displayed above "V" (Volt)
3. **Row of numbers** – singular package cells' numbering starting from the first, plugged into the package's "minus" cable
4. ↑ **3,52V** – voltage of the strongest cell in the package
5. Δ **0,02V** – voltage difference between the strongest and the weakest cell in the package (here 0.02V)
6. ↓ **3,50V** – voltage of the strongest cell in the package
7. **Ah/c** – ampere-hour window per cell – one of the two balancer windows
8. **B: 100%** – current balancer power (100% max. balancer power)
9. **Upper dotted line** – 100% equalized capacity
10. **Middle dotted line** – 50% equalized capacity
11. **Bars** – equalized capacities in bar graphics. The highest bar shows the cell (here cell 12), which required the greatest balancing (100%)
12. **Singular bottom lines** – balancer power level (singular channel). The higher the line, the higher the balancing power of that cell is.
13. **Equalize capacity** – in ampere-hour per one cell (here in cell 12 = 0,021Ah)

Warning! Pulsar 3 conducts estimates correct to three decimal places and so they are displayed on the computer screen. Due to the size of LCD displays, the values are rounded up to two decimal places. Because of this some differences may occur.

Process initialization

After plugging the battery, **Pulsar 3** checks and displays the number of recognized cells.

Warning: all packages with a balancing connection must always be plugged in the following order – first the balancer, then the charging cable. Thanks to this the charger will always recognize the right amount of cells in the package! It is important to check if the number of cells in the package has been properly recognized before starting the process. After adjusting the number of cells, if necessary, we can start the process by pressing the Rotary knob.

Process end, reports and alarms

Warning! Interrupting the process in progress is allowed only through holding the dial and not by unplugging the package!



Window after ending the process, the displayer show a „STOP” message and the backlit blinks recurrently (after manual process interruption). An acoustic signal is also generated, which fades after 30 seconds and is turned off after 5 minutes. To start another process (return to memory window) the package must be unplugged from the charger!

The window May display the following information:

<*> data process – through turning or pressing the Rotary knob, last process windows will be displayed directly before the process' end

Messages (in the frame):

END – proper process end.

STOP – premature process end – as show on the picture above (by holding the dial).

LIMITER – process end after reaching the capacity limit set in the limiter.

TIMER – process end after exceeding the process' time limit (14 hours per process).

PAUSE – displayed automatically between processes in progress. Below it the time left before starting the next process is shown. If the battery temperature „T on” is higher than the one set in the setup a „Tc to high: xx,x C” message will be displayed until the battery cools down.

! Δ x,xx V ! – displayed when the process, with a plugged in balancing (for LiXX cells), ends after the voltage difference between singular cells exceeds 50mV.

Alarms – stopping the process

Vc high – when the voltage of one of the cells (or package) exceeds the allowable value

Tc high – when the package temperature exceeds the set limit

Ti high – when the charger is overheated. All vents should be checked for signs of obscenity. The charger should not be used in a closed car trunk , where the temperature may rapidly exceed the allowable value for the charger's use.


Vs low – when the supply voltage is too low (e.g. the car battery is discharged too deeply)

Vs high – when the supply voltage is too high


ERROR – error (when for example the battery is plugged into the balancer socket and the chosen battery type was NiXX, a **Wrong connect!** and **! Disconnect accu !** message will be additionally displayed.

Software updating

Pulsar 3 software can be updated in a simple way. In order to do so a proper firmware file (**Pulsar 3 Utility.exe**) should be copied to the computer's hard drive and then start it.

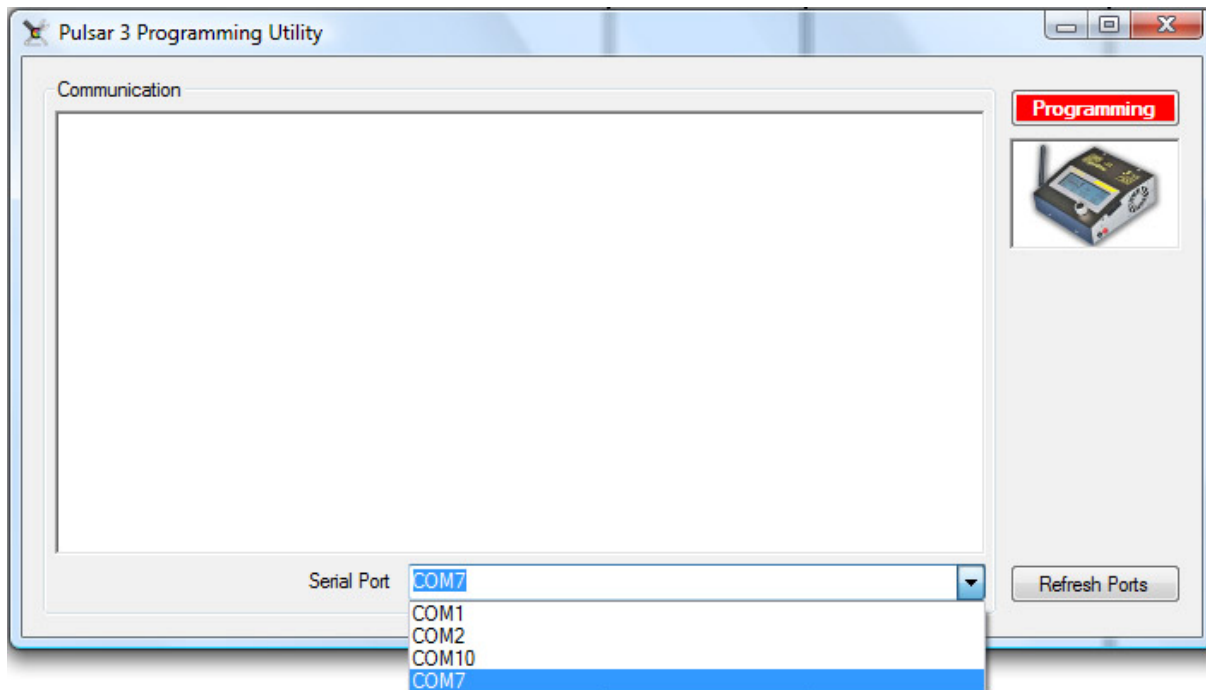

Pulsar 3 must be connected to the computer through a USB cable. To prevent software conflicts all PC programs should be turned off for the duration of the updating process. Interrupting the update may lead to the charger's damage.

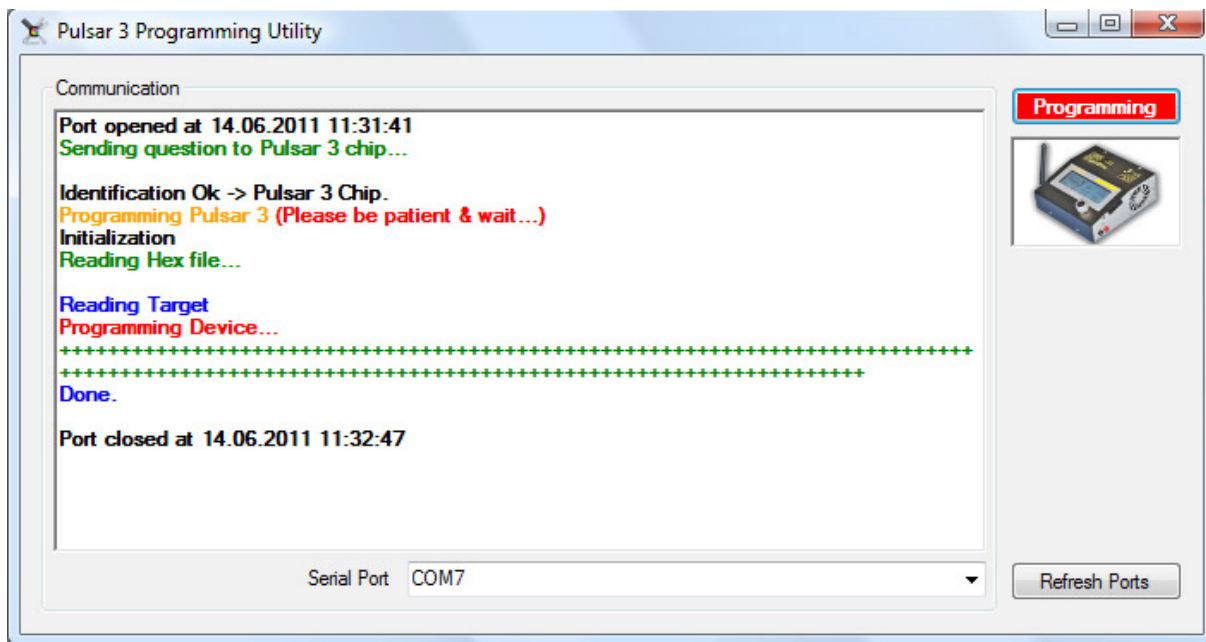

The charger should be connected with a power supply and left in standard mode (see – main menu – do not press the Rotary knob!) After starting the program we chose the appropriate „Serial Port“ (COM 7 in the example above) by which **Pulsar 3** will communicate with the computer and then Press the red „Programming“ button to start the software exchange process. The process progress is visible in the „Communication“ window. The „Refresh Ports“ button refreshes the list of available ports.


The „Done“ message confirms that the software update has been finished successfully.

If the update is finished unsuccessfully, the whole procedure should be repeated (connect the charger to the power supply again), even if the charger's display remains clear.

PC software (PulsarGraph v 3.09)

The SD memory card added to the **Pulsar 3** charger contains the installation version of Pulsar Graph. On the left side of the charger there is a USB socket, through which a direct data flow to the computer is possible during the process (communication is also possible wireless through BT). The computer software allows following the process' progress, saving data and comparing many processes registered earlier. Files saved in the charger on the SD memory card can be analyzed through the software. The program operates with Windows systems (XP, Vista, Windows 7 with 32 and 64 Bit).

Installation

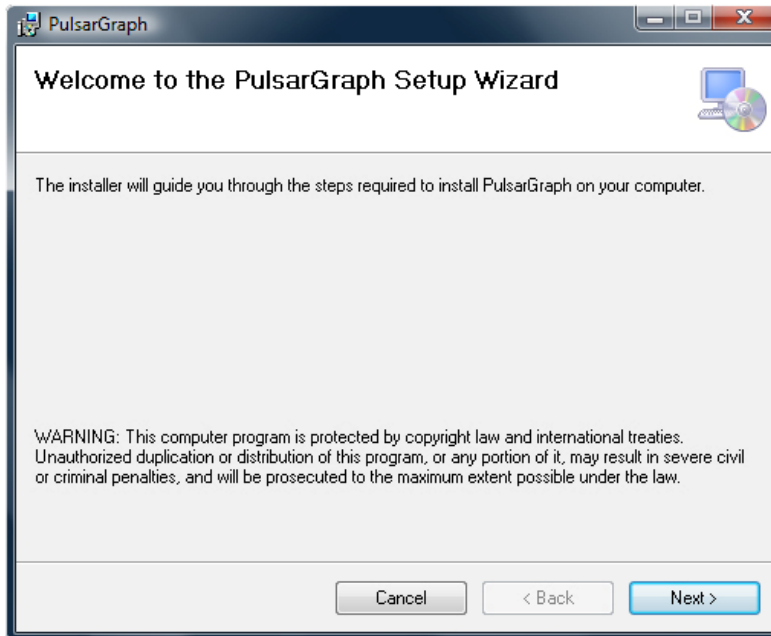


To install the software the „PULSAR_3_UTILITY“ folder must be copied from the memory card to the hard disc. Next the Setup.exe file, located in the „PULSAR_GRAPH“ folder, must be started. The installation progress is very simple and does not require further description

USB drivers.

In case the **Pulsar 3** USB cable has not been recognized by the PC, the „Drivers“ folder should be chosen during the driver installation, where the current USB driver is located.

Hardware installation

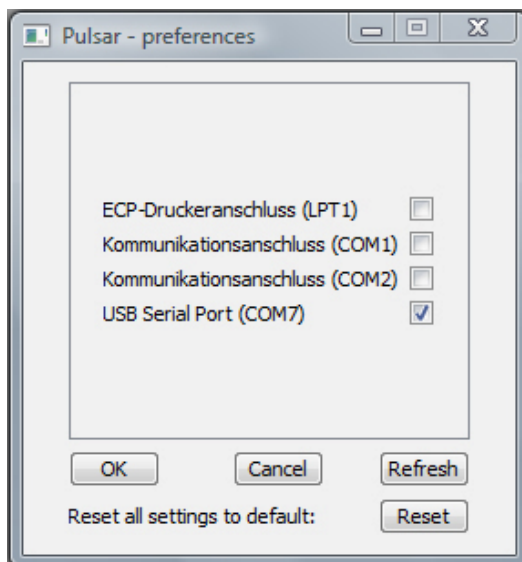

It is necessary to give the port name, with which **Pulsar 3** will be communicating with the computer. Through „File > Preferences“ we open the window containing recognized hardware.

Pulsar 3 should be recognized as hardware – a “USB Serial Port” assigned to a communication COM port of the appropriate number (the same for wireless BT communication). In the window we mark our device and acknowledge by pressing OK.

The „Refresh“ button refreshes the list of available devices and the „Reset“ button sets the default location and size of the windows.

Warning! The wireless BT transmission is blocked if the USB cable is connected to the charger.

Only 5 chargers may be connected to the computer at the same time.

Menu window

After starting the data transmission, or when the data will be saved to a file, the menu graphic window opens. We can enlarge the charts (by selecting the area with the left mouse button) and moving it (while holding the button). By double clicking the chart returns to the size of the window.

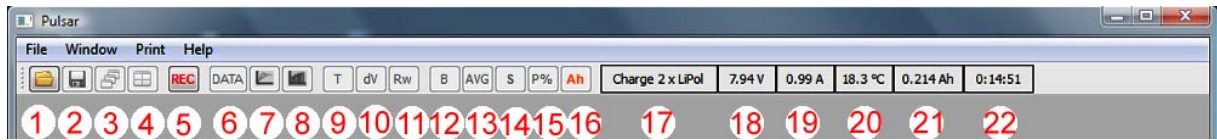


Chart description (from top): green line – package voltage curve (V); yellow – voltage increase curve (mV/min); blue – current curve (A); purple – R_i (internal package resistance); red – temperature curve ($^{\circ}\text{C}$).

Below: charts, which appear after pressing „B” (*Balance*) from the symbol toolbar. In the upper part of the window there are voltage charts for separate cells (only with Am active balancer). It is possible to select and show the charts of the selected cells (see *Voltage comparison* window – “S” button).



Symbol toolbar – function description




Toolbar's symbols function:


1. Open file.
2. Save file.
3. Stack windows.
4. Set windows side by side.
5. **Record** button – saving files begins automatically when the data transmission begins. Saving can be paused and resumed with this button. When the "Rec" sign is blinking the transmission is active but the data saving is paused.
6. Data window (description below).
7. „Voltage comparison“ window (description below)
8. „Capacity comparison“ window (description below)
9. T – enable/disable temperature chart
10. dV – enable/disable voltage increase chart (mV/min)
11. Rw – enable/disable internal resistance chart, active when in the charging process the „Pause“ mode is active in the setup
12. B – {Balance} switches between the standard window and the balancer window.
13. AVG – voltage value charts per cell: green – medium; yellow – maximum; red – minimal (only when „B“ is disabled)
14. S – {Select} switches between: S, - or + . After selecting (bolding) the curves we can disable the remaining „+“ curves or the marked „-“ curves (only when „B“ is enabled)
15. P% – „Bar-Display“ shows the voltage of singular cells compared to the average value in the form of a graph or, if the „Ah“ button is active, the equalized capacity of singular cells. Current balancing currents are displayed below (only when „B“ is enabled)
16. Ah – switches the „Data“ window from current voltages to current equalized capacities (a list of cells at the bottom of the window, only when „B“ is enabled)
17. Type of process and the number of cells in the package
18. Current package voltage
19. Current process current
20. Current package temperature
21. Charged or discharged capacity
22. Duration of the process

Data window (data)

After clicking „Data“ a window pens containing the most crucial data from the process' progress.

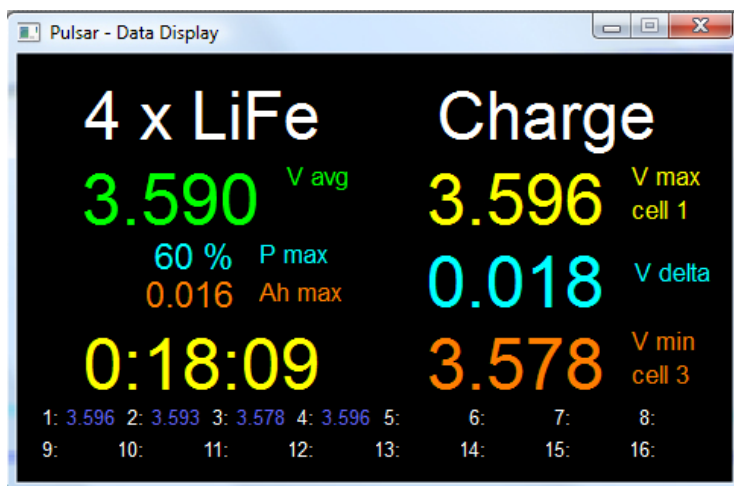

„Data“ window, when the balancer is active. A 4s-LiFe package is charged, the average voltage (avg) is 3.590V, the balancer operates on 60% power, the strongest cell was balanced 0.016Ah, the process duration is 18 minutes and 9 seconds, the strongest cell has 3,596V (cell 1), delta (the difference between the strongest and the weakest cell) of 0,018V, the weakest cell has 3,578V (cell 3). Voltage of all the cells in the package is shown below.

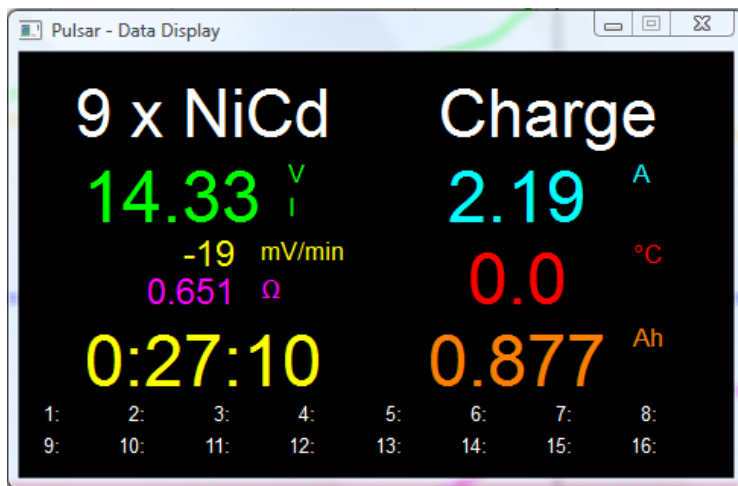

„Data“ window, when the balancer is not active.

Package 9 x NiCd is charged, 14,33V, the displayed „I“ show that the inflex was already recognized, current voltage decrease in the package is -19mV/min (the process is in the delta-peak recognition phase), package resistance (Ri) is 0,651Ω, process duration is 0 hours 27 minutes and 10 seconds, the current current is 2,19A, 0,0°C – indicates that the temperature indicator has not been plugged in, charged 0,877 Ah.

„Voltage comparison “ window

In this window voltage curves from many processes (for example formatting or regeneration) can be compared.. After clicking (x1) in the upper left corner the estimated voltage per cell will be show.

The "S" button will switch between: S, - or +. In the „S“ position we mark the curves by clicking their number in the window's key (on the right side) while holding CTRL we can mark several curves. Another clicking of the “S” button will disable the remaining “+” curves or disable marked “-“ curves.

„Capacity comparison “ window

The bar chart enables a quick capacity data comparison for singular processes (e.g. formatting). The red bar shows discharge, the bright-red shows discharge after current reduction, green shows charging, bright-green – for NiXX – shows the Inflex point after detection, and for the rest of the batteries – after charging current reduction of after changing to impulse mode with Fast mode enabled.


When more then 8 windows will be opened at the same time – left and right arrows can be used to move the chart (scroll).

Appendix 1

Balancer adapter

The **Adapter** allows connecting the battery packages to the balancer socket. It is a circuit board with 17 paths for 16 balancer channels (1 x minus and 16 x plus per each cell). Four rows of holes in a 2,50mm raster (so that 2,54mm raster sockets could be soldered) enable fitting the package connections to the balancer socket (different types of connectors and connection configurations).

Plugging in

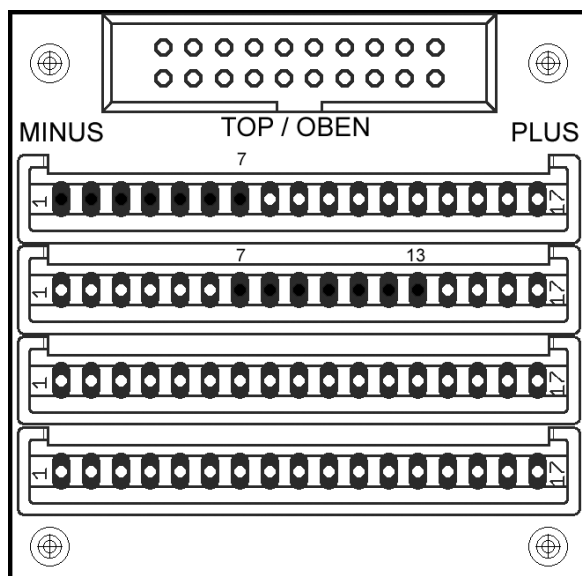

Almost every battery producer has his own connector system, which makes using different adapters necessary. Appropriate system cables can be used with the connector that fits the packages, soldered in holes on the adapter's disc or into soldered sockets. When doing this, pay attention to the appropriate connections:

- Pin 1 – cell minus 1
- Pin 2 – cell plus 1 / cell minus 2
- Pin 3 – cell plus 2 / cell minus 3
-
- Pin 16 – cell plus 15 / cell minus 14
- Pin 17 – cell plus 16

Example: 12S battery package (12 cells in package) has two 7 pin balancer connectors.

Place the adapter disc as shown on the picture: on the left, solder the first 7 pin socket (from path nr 1) and the second 7 pin socket in the second row (from path nr 7). Pin 7 of the first socket will be connected with pin 1 of the second socket (pole + 6 cells connected to it – 7 cells).

Plugging a 10S package to the adapter is similar. First 6 pin socket (from path nr 1) and next the second 6 pin socket (from path nr 6). Pin 6 of the first socket will be connected with pin 1 of the second one (pole + 5 cells connected with the pole – 6 cells).


The third and fourth row of holes can be used to plug packages in other configurations or with a different socket system.

Warning! – after configuring (proper socket soldering), the bottom side of the disc must be protected from short circuits by attaching the insulating foam, which comes along in the set.

Graupner/Robbe/Kokam system enables the use of shorter pins to long pin strips. In this case it is important to pay attention to the proper plugging, as otherwise it may result in a short circuit, which may lead to battery, adapter or charger damage.

ATTENTION

With simultaneously plugging of two packages in a series connection pay attention to proper connecting:

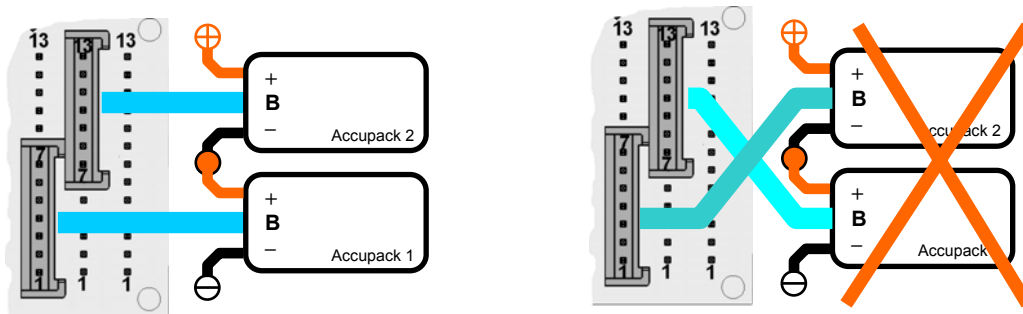

When using more different pin system it is recommended to use a separate, properly configured interface to each system. Using suitable adapters is also possible (e.g. the Bantam system).

CAUTION

- Please pay close attention to the proper polarity of the plugging
- Avoid any short circuits
- Always plug the battery to the interface first and then the adapter to the charger
- Contact customer service In case of any signs of device malfunction

Manufacturer & Service:

ELPROG
Ul. Przemysłowa 1/611
35-105 Rzeszów
Poland

Distribution & Service

pp-rc Modellbau
Weidenstieg 2
25337 Kölln-Reisiek
Germany

www.pp-rc.de
WEEE-Reg.-Nr DE77074747

INDEX

A

Ah/c 4, 16
alarms 2, 17
Auto 4, 12, 14

B

Backup 8
Balancer adapter 22
balancer socket 6
Basic setup 9
Batteries 7
Beep 4, 9
BT 1, 2, 4, 6, 7, 8, 19

C

Certificate of conformity 4
Ch.Dis 4
Charge 4
charging LiXX 10
charging NiXX 9
charging Pb 11
clock 5, 7, 8
Contr. 4, 9
Cs 4

D

Dis.Ch. 4
Disch. 4
discharging 11
Double processes 12
DSP 1

E

Export 8

F

Fast 4, 5, 10, 11, 15, 22

Format 2, 4, 9, 14

I

Ib:x,xx 10
Import 8
Inflex 4, 9, 10, 14, 22
Installation 19
Invers 4, 9

L

Last proc. 4
Light 4, 9
LiXX 4

M

Memory 2, 4, 5, 7, 10
memory card 1, 2, 4, 5, 6, 7, 8, 19

N

NiXX 4

O

Only balancing 15
Operating principle 7

P

Parameters 2, 4, 7, 9, 10, 11, 13, 14
Pause 5, 9, 12, 14, 21
Pb 4
PC software 19
Personalizing 8
Power 1, 3, 5, 7, 9
Process end 17
Process initialization 17
PulsarGraph 19
Pulse 5, 7, 8, 9, 15

R

Reflex 5, 10, 11
Regen. 5, 14
Rep*01 12, 14
Revers 5, 7, 9, 11, 12, 13
Ri 5, 15, 20, 22
RTC 5

S

SD 1, 2, 4, 5, 6, 7, 8, 19
settings 8
Setup 7, 8, 9, 15, 19
Software updating 18
Starting and operating 5
Store 2, 4, 5, 10, 13, 14

T

T off 5, 9
T on 5, 9, 17
Table of content 2
Tc 5, 15, 17
Technical specification 3
Ti 5, 17

V

V off 9
V rev 5, 9
V/c 5, 15, 16
Vc 5, 11, 17
Vd 5, 11, 12, 14
Ve 5, 13
Voff 5
Vrev 5, 12
Vs 5, 7, 11, 13, 15, 17

Δ

Δ 4, 9, 10, 14, 15, 16, 17